 




Tour of Your Vado HD

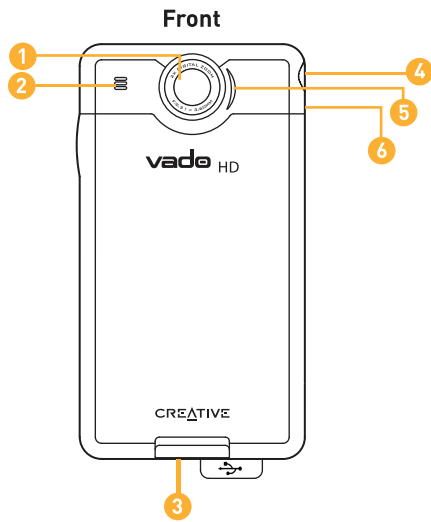

- 1 Lens**
- 2 Microphone**
- 3 Battery Latch**
Push to remove cover
- 4 AV Output**
Connect to TV with AV cable (sold separately)
- 5 LED**
Lights up when connected to your computer, or when recording videos
- 6 Mini HDMI Output**
Connect to HDTV with HDMI cable
- 7 USB Connector**
Pull to release USB connector
- 8 Tripod Mount**

PN 03VF05800003 Rev A

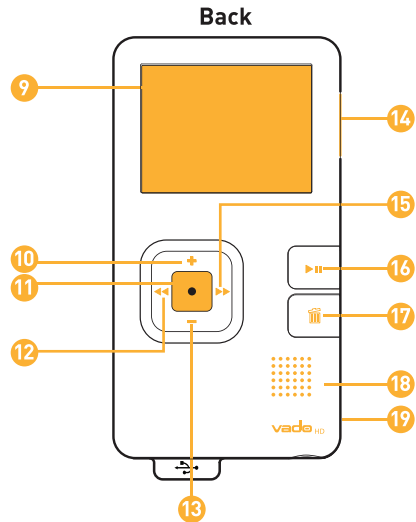

- 9 LCD**
- 10 Increase**
During playback: Press to increase volume
- 11 Record**
- 12 Previous**
During playback: Press and hold to rewind
- 13 Decrease**
During playback: Press to reduce volume
- 14 Power**
Press to turn on or off
- 15 Next**
During playback: Press and hold to fast forward
- 16 Play/Pause**
Press and hold to play all videos
During playback: Press to pause or resume playback.
- 17 Delete**
During playback: Press and hold to delete all
- 18 Speaker**
- 19 Wrist Strap Loop**
Attach wrist strap or lanyard

© 2008 Creative Technology Ltd. All rights reserved. Creative, the Creative logo, Vado and the Vado logo are trademarks or registered trademarks of Creative Technology Ltd in the United States and other countries. All other trademarks are the property of their respective owners. All specifications are subject to change without notice.

CREATIVE®




クイックスタート
Hızlı Başlangıç
快速开始
快速入門
Quick Start

vado HD
POCKET VIDEO CAM


1. Getting Started

Insert or Remove battery
Push battery latch to remove cover and insert or remove battery.

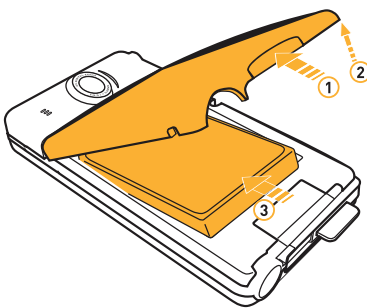


Charge your battery

Connect your Vado™ HD to a USB port on your computer. appears on the LCD temporarily. In normal mode, charging is complete in about 7hrs. For express charging in about 4.5hrs, press . appears on the LCD. Videos cannot be viewed or transferred in express charging mode. To return to normal mode while charging, press again. When charging is complete, appears on the top right hand corner of the LCD.

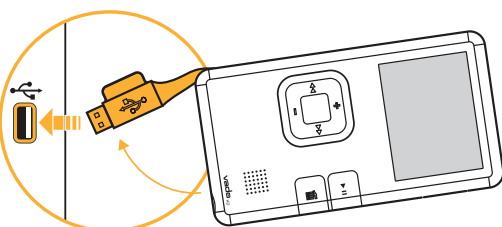

2. Record & Play

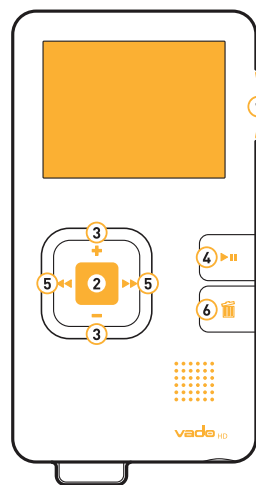

- 1 Press to power on.**
When not in use, your Vado HD enters power saving mode after 1 min, and automatically turns off after 5 mins.
- 2 To start or stop recording,** press .
- 3 To zoom in or out while recording,** press or .
- 4 To preview recorded videos,** press .
- 5 To skip to previous or next video,** press or .
- 6 To delete video clips,** press . Press for 'No' or for 'Yes'.

To adjust Time/Date, Video Quality, Anti-Flicker, Language or Instant Record settings, press and at the same time.

Video Quality	Usage	Recording Time
HD+ (default)	Enhanced High Definition	2 hours
HD	High Definition video	4 hours
VGA	Long recording	8 hours

Instant Record: When activated, your Vado HD enters power saving mode after 1 min of inactivity. Pressing any button wakes your Vado HD for instant recording - great for capturing spontaneous moments! When not used for 30 mins, your Vado HD shuts down to conserve battery power.

3. Plug & Share

Connect your Vado HD to your computer's USB port as shown. In the window that appears, select to launch Vado Central software.

To copy videos to your computer, click **Copy**.


To share your videos online, select the videos you want and click **YouTube™** or **Photobucket™** or **Box**.

To take a photo from your video, click the **Snap Photo** button .

To take up to 30 consecutive photos from your video, click the **Photoburst** button .

To add music and automatically create movies, click **Create Movies**.

To trim videos, click the **Video Editing** button and drag the start and end markers .

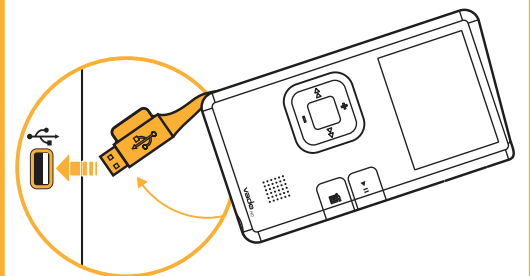

Note

- Safety and regulatory information can be found in the root directory of your Vado HD.
- You can record up to 4GB for a single video file.
- For more information about your Vado HD, visit myvado.com